

1118-1E-A2/4888 1118-2E-B2/4889 Part list

No.	Code	Description
1	ST092101-1	front panel paster(4888)
	ST092102-1	front panel paster(4889)
2	PD055348	main control board
3	SG055005	rubber foot
4	SE055004	cable holder
5	PD055500-2B	driver board (4888)
	PD055500-3B	driver board (4889)
6	VM055022-15E	main transformer(4888)
	VM055022-16E	main transformer(4889)
9	KK055000-1	main switch
10	SC055003	handle
11	QM081016-3	torch without cable
12	XA10-70-H1	work clamp with cable
13	XE055000	power cable
14	DC055000-3	triac
20	EY1118X0101B1	bottom panel
21	EY1118H0101B1	back panel
22	EY1118S0101R1	top cover
23	PD055371	power PCB board
24	JC073210	quick socket
25	JG071200	control socket

